





CR50 USER'S MANUAL

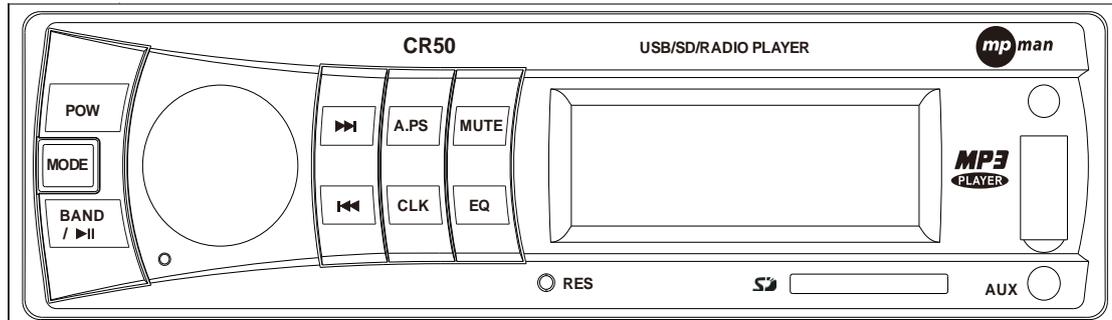


Please read this manual carefully
before operation!

Installation Precautions:

- 1.This unit should be installed by professional personnels, if possible.
- 2.Please refer to the instruction manual for electrical application, wrong operation will cause damage to the unit.
- 3.Apply to the power cord after all connections of the unit are set.
- 4.Insulate all exposed wires to avoid short circuit.
- 5.All loosen wires should be fixed after installation.
- 6.Read the application and operating carefully instructions for each part before installation.
- 7.The unit is designed for 12V-15V negative ground operation system only.Make sure your vehicle is connected to such negative ground electrical system.
- 8 .Be sure to connect the unit in exact according to the lead-diagram, otherwise malfunctions or damages would be possible.

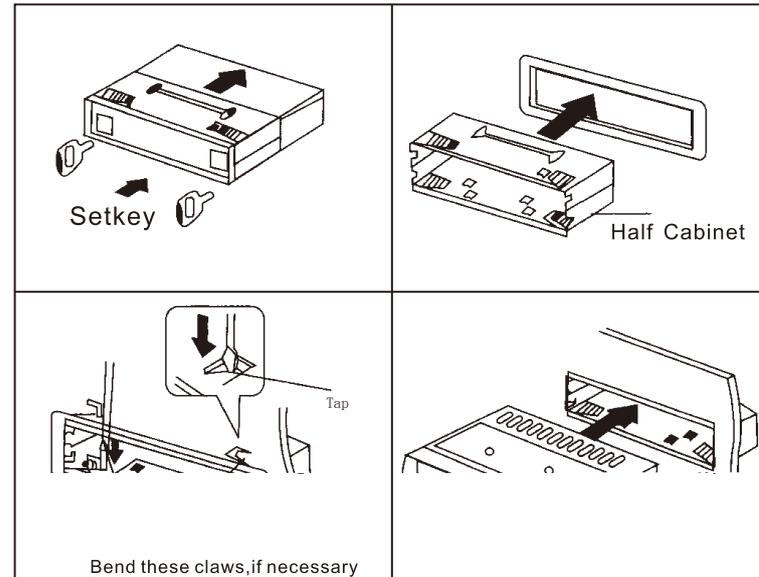

Wiring diagram:

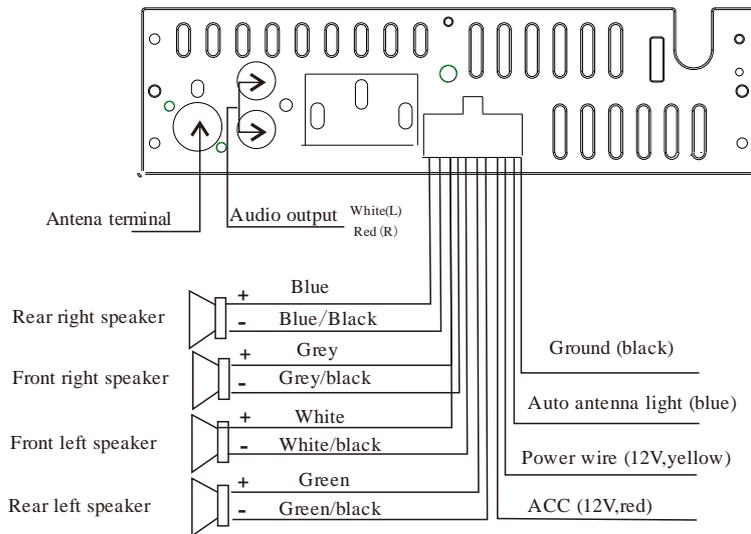

SPECIFICATIONS:

FM tuner:

Frequency range:.....87.5-108MHz

Medium frequency:.....10.7MHz $\pm 0.3\%$

Signal/Noise ratio:.....50dB

Radio sensitivity :10dB

USB/SD:

Frequency response:.....20Hz-20KHz

Signal/Noise ratio:..... >50dB

T.H.D.....<0.5%(1KHz)

- 1.This unit is applicable to 12V direct-current negative ground electrical system only.
- 2.In order to avoid short circuit, please disconnect the wire connecting terminal of the car storage battery before all applications of the unit are completed.
- 3.Please note that the yellow directing wire is connected to the anode terminal(+) or the BAT terminal.
- 4.Change the fuse, the specifications of the fuse for both the automobile and the unit shall be the same.
- 5.Excellent 4-8 ohm speaker is required for perfect performance.

Others:


MAX Output Power.....4x45W

Supply voltage.....12-15VDC minus earth

Speaker impedance.....4-8 ohm /ch

Demensions.....177x115x50mm

Front panel and functions:

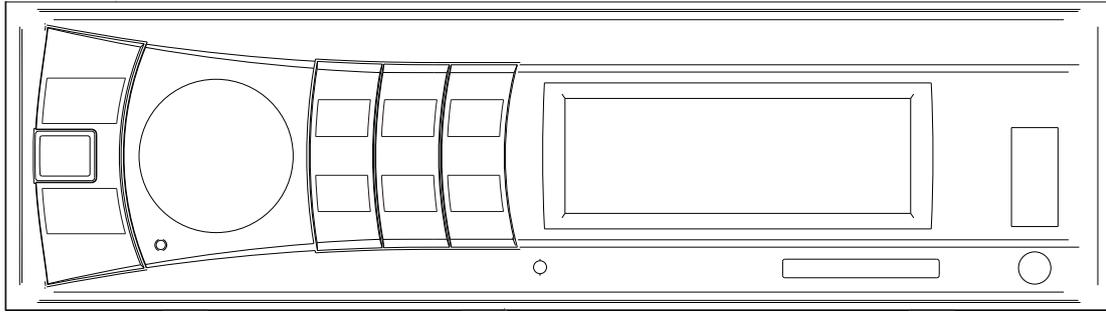

1. Power: Power on/off

2. A.P.S:

*When play USB/SD,short press it to enter track selection,rotate VOL to select track,pres it for playing

*On radio mode,press it for auto station search and storage.

3.⏮/⏭:

*When play USB/SD,press it to select previous or next track,hold it for fast forward 10 tracks or fast backward 10 tracks.

hold it for auto stations scanning.

ations),

4. BAND / ►❏ :

*When play USB/SD, press it for PAUSE.

*On radio mode, press it for band conversion among FM1, FM2, FM3, hold it to store the station

5. VOL button: Volume control (rotate the button to adjust it), press the button to select among

6. SD card port

7. RESET: Reset button


8. MODE: Press it for mode conversion.

9. MUTE: press it for mute

for back to the menu.

11. USB port

12. AUX (external signal input)

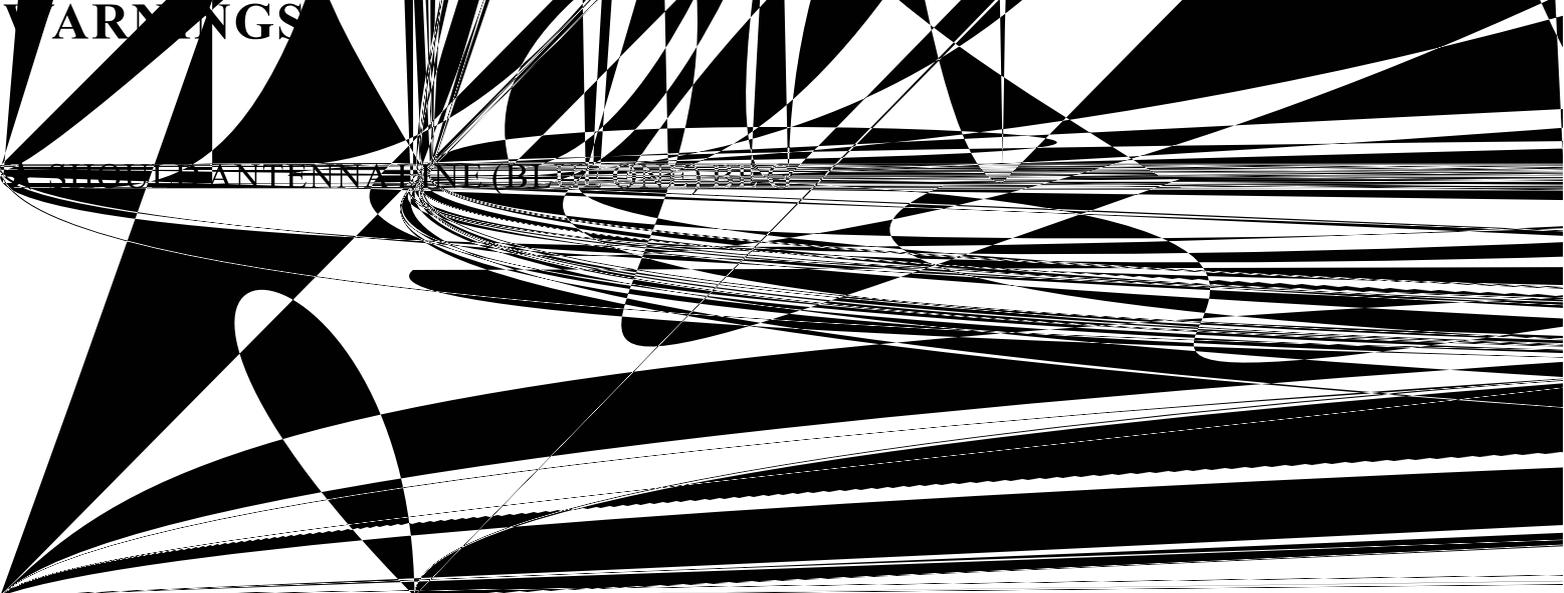

ARMINGS

ANTENNA (BI)