



**For Model No.  
MP135**

**EN**

**MP3 & Video Player  
Instruction Manual**

Please read this instruction carefully before the operation

## **Introduction**

Congratulation for the purchasing of the MP4 Player. The high integration reduces the device weight and the dimensions and the use is comfortable. The big display with TFT technology offers clear and sharp information and the USB 2.0 High Speed interface make easier the data transfer operation from/to the computer. The EM825 MP3 Player has built-in a Li-Polymer battery rechargeable by computer USB port. By the microphone inside it is possible to record voice messages and play them directly with the device or by computer.

Before using this product, please read this manual and retain the instruction for future reference.

 
# Description

Here below you will find a product description

1. Next [▶▶] / Forward [▶▶]
2. Menu
3. Previous [◀◀] / Backward [◀◀]
4. Play [▶] / Pause [⏸]
5. VOL +(Increase the Volume)
6. VOL – (Decrease the Volume)
7. USB Connector
8. Earphone Connector
9. MICRO SD Card Slot
10. Power ON/OFF

## 1. Display

Here below you will find a display description

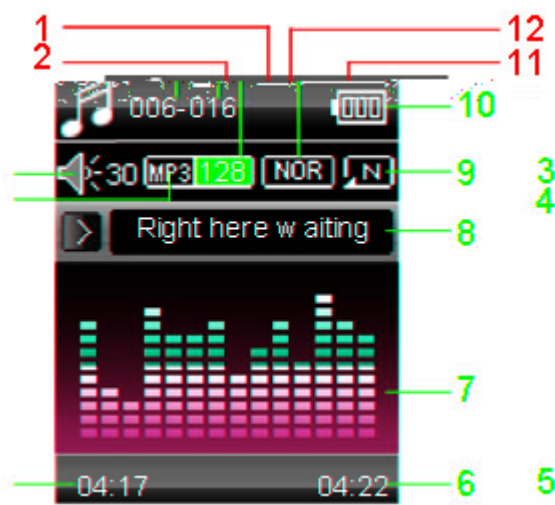

1. Total Number of Songs
2. Current Song Location
3. Volume
4. File Format
5. Elapsed Time
6. Total Time
7. EQ Animation
8. Song Name
9. Repeat Mode
10. Battery Life
11. EQ Mode
12. Play Rate

## 2. Use

### 2.1 Power ON/OFF

The MP3 player has built-in a rechargeable battery. At the first use we suggest to recharge the battery for a long period (around 8 hours). To recharge the battery please connect the MP3 player to USB computer port.

Powering On:

1. Turn on On/Off button to On position

Powering Off:

1. Hold the Play [▶] / Pause [⏸] key until the power-off animation begins
2. Then, turn the On/Off button to Off position.

### 2.2 Recharge the Player

 
The player can be recharged by the provided USB cable by connecting to the PC. During charging, an icon on the right will show. You should first turn on you PC, and then connect the player to the PC through the USB cable. The player should be fully charged in 2 to 3 hours.

 
## 3. Main Menu

After powering on the MP3 player, you can see the main menu with 8 submenus (optional), which allow you to select different functions and options.

By using the [◀] or [▶] buttons, you can select the desire option, and then press MENU [M] button to confirm the selection.

To access at the main menu while you are inside any of these submenus, press and hold MENU [M] switch for a few seconds. (Short pressing the MENU [M] switch usually opens the submenu option of each submenus)

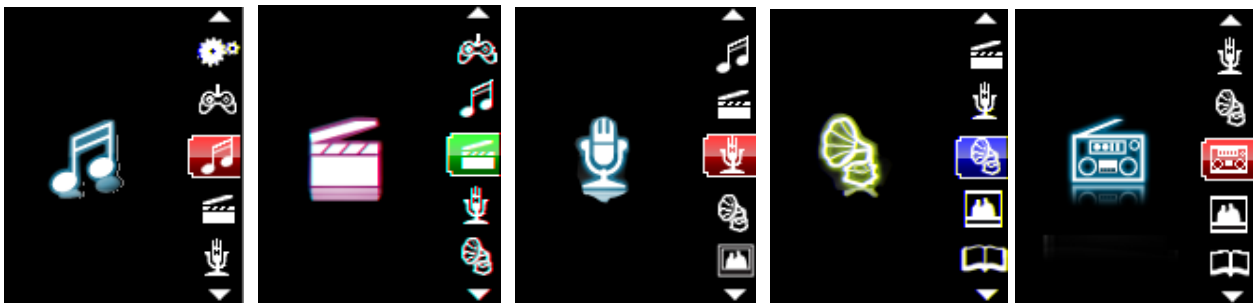

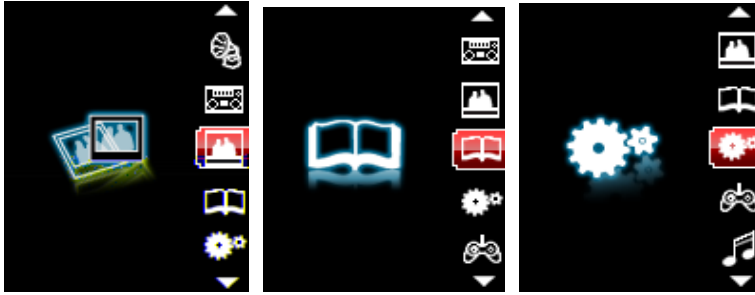

The available options are:

**Music:** Select this option to play song.

**Movie:** Select this option to play AMV video.

**Record:** Select this option to record voice messages by the microphone inside.

**Play:** Select this option to play recorded voice message.

**Radio:** Select this option to use the FM radio.


**Text:** Select this option to read text.

**Picture:** Select this option to browse and see photos.

**Setting:** Select this option to access at system setup.

### 3.1 Music Mode

 The music player option allows playing songs. To activate this option please follow here below instruction:

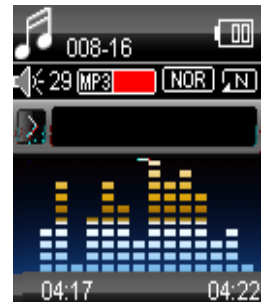

#### 3.1.1

### 3.1.2 Music Submenu

By short pressing the MENU [M] button, you can find the following music submenus. Press [⏪] or [⏩] to choose, and then press MENU [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
While Music is paused	Local Folder
	Delete File
	Delete All

Status	Submenu Options
While music is on	Repeat
	Equalizer
	Replay Mode

#### Local Folder:

Under this directory, you can choose to go up a folder level by pressing MENU [M] to confirm. And then you can choose the folder you want to play

#### Delete File:

Delete specific song you want.

#### Delete All:

Delete all music files using this option.

#### Repeat:

Seven repeat modes are listed including Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro.

#### Equalizer

With preset 7 equalizers including Natural, Rock, Pop, Classic, Soft, Jazz and DBB

### 3.1.3 A-B Repeat Function

The player can loop-playing a specified music interval of a song. While Playing Music, Press [M] button to select replay mode ,then press the [M] button .set repeat start point A, and then press [⏩]button to set repeat end point B. The player will then loop-play the content between point A and B.

### 3.1.4 Lyric Display

The Player supports Lyrics Display, in which the lyrics would be shown synchronizing with the actually lyrics of the song. The file format should be ".lrc", and the file name should be exactly the same with the song's file name and place within the same folder with the song. To activate this option, please follow here below instruction:

1. While playing song, press and hold MENU [M] to activate lyrics display
2. Short press MENU [M] button again to de-activate the lyrics display and return to music play menu.

## 3.2 AMV Mode

The AMV MODE allows to play movies in AMV Format. To activate this option please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu.
2. By using [⏪] or [⏩] buttons, select AMV MODE option then press [M] button.
3. Press PLAY [▶ ||] button to start to play the first movie available.

**Note**

The Movie Player only plays AMV files, you need conversion from other file format in order to watch the movie you like.

### 3.2.1 Key Function at AMV Mode

During the song play it is possible to activate the following controls.

**PLAY [▶ || ]:** Press the PLAY [▶ || ] to start to play a movie. Press the play button again to pause the movie. To restart to play the movie press play button again.  
Hold the play button for longer time will eventually turn off the player

**REW & FFWD [◀ ▶]:** Press [◀] or [▶] to select the previous or the next movie.  
Press and Hold the [◀] or [▶] buttons to rewind or fast forward the movie.

**Volume (VOL+ and VOL-):** Press [VOL+] button to increase the volume and press [VOL-] button to decrease the volume.

### 3.2.2 AMV Submenu

By short pressing the MENU [M] button, you can find the following AMV submenus. Press [◀] or [▶] to choose, and then press MENU [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
While Video is paused	Local Folder
	Delete File
	Delete All
	Repeat

Local Folder:

Under this directory, you can choose to go up a folder level by pressing MENU [M] to confirm. And then you can choose the folder you want to play

Delete File:

Delete specific video you want.

Delete All:

Delete all videos using this option.

Repeat:

Seven repeat modes are listed including Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro.

### 3.3 Record (Voice messages recorder)

This option allows to record voice messages by using the microphone inside. To record voice message, please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu.
2. By using [◀] or [▶] buttons, select RECORD option then press [M] button.
3. Press PLAY [▶ ||] button to start to recording.
4. You can listen to your wav file under the Play submenu.

During recording, Press the PLAY [▶ ||] to start recording. Press the play button again to pause recording. Hold the PLAY [▶ ||] / M button for longer time will eventually stop recording.

By short pressing the MENU [M] button, you can find the LOCAL FOLDER and REC TYPE. Press [◀] or [▶] to choose, and then press MENU [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

1. Under the LOCAL FOLDER submenu, you can choose to go up a folder level by pressing [M] to confirm. And then you can choose the folder you want to play
2. Under the REC TYPE submenu, you can choose the recording format including 32K BPS/128K BPS .

### 3.4 Play (Voice Messages Player)

The voice option allows to play the voice messages recorded by the MP3 Player. To activate this option, please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu.
2. By using [◀] or [▶] buttons, select Play option then press [M] button.
3. Press PLAY [▶ ||] button to start to play the first recording available.

#### 3.4.1 Key Function at VOICE Mode

During the recording play it is possible to activate the following controls.

**PLAY [▶ ||]:** Press the PLAY [▶ ||] to start to play a recording. Press the play button again to pause the recording. To restart to play the recording press play button again.  
Hold the play button for longer time will eventually turn off the player

**REW & FFWD [◀ ▶]:** Press [◀] or [▶] to select the previous or the next recording.  
Press and Hold the [◀] or [▶] buttons to rewind or fast forward the recording.

**Volume (VOL+ and VOL-):** Press [VOL+] button to increase the volume and press [VOL-] button to decrease the volume.



### 3.4.2 VOICE Submenu

By short pressing the MENU [M] button, you can find the following music submenus. Press [◀] and [▶] to choose, and then press MENU [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
While Music is paused	Local Folder
	Delete File
	Delete All

Status	Submenu Options
While music is on	Repeat
	Replay Mode

Local Folder:

Under this directory, you can choose to go up a folder level by pressing MENU [M] to confirm. And then you can choose the folder you want to play

Delete File:

Delete specific voice file you want.

Delete All:

Delete all voice files using this option.

Repeat:

Seven repeat modes are listed including Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro.

Replay Mode:

You can loop-playing a specified music interval of a song.

### 3.5 FM (FM Radio)

When the FM Radio mode is activated it is possible to hear radio programs.

This option allows us to enjoy FM radio programs. To use it, please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu
2. By using [◀] or [▶] buttons, select FM option then press [M] button to confirm.
3. If there are preset channels, press PLAY [▶ ||] button to play the first channel, press again for the next channel.

#### 3.5.1 FM Submenu

By short pressing the MENU [M] button, you can find the following FM submenus. Press [◀] and [▶] to choose, and then press MENU [M]key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Here below you will find the FM radio option list.

**AUTO SERACH:** Select this option to start auto-searching for radio channels.

**SAVE:** Select this option to save radio channels

**DELETE:** Select this option to delete radio channels.

**DELETE ALL:** Select this option to delete all radio channels.

**NORMAL BAND:** Select this option to activate normal FM band.

**JAPAN BAND:** Select this option to activate Japan FM band.

**REC:** Select this option to start FM recording.



### 3.5.2 Automatic Search

To scan automatically all the available channels, please follow here below instruction:

1. When the FM Mode is activated, press MENU [M] button to select AUTO SEARCH option.
2. Press [M] button to start the automatic search. The MP3 Player will store the first 20 radio programs available.

### 3.5.3 Manual Search and Storing Channels

To scan manually the frequencies please follow here below instruction:

1. When the FM Mode is activated, long pressing the [◀◀] or [▶▶] buttons to start auto scanning. Scanning stops as an available channel is found.
2. By short pressing the [◀◀] or [▶▶] buttons to step-up scanning.
3. Press MENU [M] button to select SAVE option.
4. Press PLAY [▶ ||] and this specific channel will be saved as the last channel
5. Repeat the step from 1 to 4 for each desired radio program by keeping in mind that the MP3 Player has 20 memory positions.

### 3.5.4 FM Radio Record (REC)

To record FM radio program please follow here below instruction:

1. When the FM Radio Mode is activated, press MENU [M] button to select REC option.
2. Press PLAY [▶ ||] button to start the recording.
3. Press PLAY [▶ ||] button to pause the recording and press it again to restart the recording.
4. To stop and save the recording, long press [M] button, will return to FM mode.

## 3.6 E-Book

The Ebook option allows reading text file. To activate this option please follow here below instruction:

- 1.

### 3.6.1 E-Book Submenu

By short pressing the MENU [M] button, you can find the following music submenus. Press [◀◀] or [▶▶] to choose, and then press [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
paused	Local Folder

	Playback Set
	Delete File
	Delete All

Local Folder:

Under this directory, you can choose to go up a folder level by pressing MENU [M] to confirm. And then you can choose to folder you want to play

Play Set:

You can choose between manual play and auto play. For auto play, you can set the playing time from 1 to 10 seconds for each page of the E-book.

Delete File:

Delete specific text file you want.

Delete All:

Delete all text files using this option.

## PHOTO

The Photo option allows browsing JPG file. To activate this option please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu.
2. By using the [◀◀] or [▶▶] buttons select PHOTO, and then press [M] button to confirm
3. Use [◀◀] or [▶▶] buttons to choose the file
4. Press PLAY [▶ ||] button to start browsing the file

### 3.6.2 PHOTO Submenu

By short pressing the MENU [M] button, you can find the following music submenus. Press [◀◀] or [▶▶] to choose, and then press [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
While Video is paused	Local Folder
	Playback Set
	Delete File
	Delete All

Local Folder:

Under this directory, you can choose to go up a folder level by pressing PLAY [▶ ||] to confirm. And then you can choose to folder you want to play

Play Set:

You can choose between manual play and auto play. For auto play, you can set the playing time from 1 to 10 seconds for each picture.

Delete File:

Delete specific photo file you want.

Delete All:

Delete all Photos using this option.

## 3.7 System Set (Setup)

The SETTING option allows to access to MP3 Player setup system. To access at system setup please follow here below instruction:

1. Power ON the MP3 player, button, the screen will display the main menu.
2. By using the [◀] or [▶] select SYSTEM option then press [M] button to enter the SYSTEM MENU.
3. By using the [◀] or [▶] select the system setup parameter and press MENU [M] button.

The parameters available in the setup system are:

**Clock:** This option allows setting of the system date and time.

**LCD set:** This option allows setting the brightness, darkly and black screen of the LCD panel.

**Language:** This option allows setting the Language of the User Interface.

**Power Off:** This option allows setting the off time and sleep time.

**Memory Info:** This option allows checking the memory usage.

**Firmware Ver:** This option allows checking the firmware version.

**Firmware Upg:** This option allows to upgrade the firmware.

### 3.7.1 System Time Set

This option allows setting of the system date and time. The upper case display the date in Year : Month : Day Format, and the lower case display the Time in Hour : Minute : Second format. To change the Date and time, please follow here below instruction:

1. Under the SYSTEM MENU, choose SYSTEM TIME by pressing [◀] or [▶] and press [M] to confirm
2. Press [◀] or [▶] to choose the parameter you want to adjust
3. press [VOL+] and [VOL-] to change the value. Press MENU [M] to confirm.

### 3.7.2 Power Off Set

This option allows setting the off time and sleep time. By setting Off Time, it is possible to enable (10s, 20s, 30s, 40s, 50s, 60s, 70s, 80s, 90s, 100s, 110s, 120s, 130s, 140s, 150s, 160s, 170s, 180s, 190s and 200s) or disable the power management features to automatically shut down your player if it is not used. By setting Sleep Time, it is possible to set power off the unit after a specified time (10s, 20s, 30s, 40s, 50s, 60s, 70s, 80s, 90s, 100s, 110s, 120s) from the moment you confirm about this selection.

To modify this parameter please follow here below instruction:

1. Under the SYSTEM MENU, choose POWER OFF by pressing [◀] or [▶] and press PLAY [▶ ||].
2. By using the [◀] or [▶] buttons, select OFF TIME or SLEEP TIME and press [M] button.
3. Choose the desired OFF TIME or SLEEP TIME and press [M] to confirm.

# Memory info

The figure presents the total volume of the disc, the percentage present the percentage between used space and total space.

## **MPMANAGER**

For movie and music synchronisation and conversion, please use MPMANAGER software supplied in the CD ROM.

This software can be used also for UPDATE of your player.

**MPMANAGER manual is included in your CDROM.**

## Specification

Size	80*41*9.5MM	
Weight	38g	
Screen	Full color display, 1.8 inch screen, 262K color	
Computer connection	High-speed USB 2.0 (FS) Flash disk	
Build-in memory	512MB,1GB , 2GB,4GB ,8GB	
Supply power	The longest playing time is 10hours	
REC	Sample ratio	32KHz
	Recording format	32K bps/128K bps
	Recording time	8hours (32 K bps)
MP3、WMA、ASF	The biggest outputting ratio	(L) 10mW+ (R) 10mW (320ohm)
	MP3 bit rate	8K bps – 320K bps
	WMA、ASF bit rate	5K bps – 384K bps
	Frequency corresponding	20Hz-20KHz
	SNR	85dB
	Lack fidelity	<+_0.05
FM radio	Frequency scope	76 MHz-90MHz/87MHz-108MHz
	Radio stations	20
	The biggest output rate of earphone	(L) 10mW +(R) 10mW (320)
	SNR	45dB
Music format	MP1、MP2、MP3、WMA、WAV,	
Temperature	-5 to 40 degree centigrade	
Multi languages	Traditional Chinese, English, simple Chinese, German, French, Italian and Spanish etc	
Operation system	Windows98/SE/ME/2K/XP、Mac OS 10、Linux 2.4.2	

Notice: You will not informed if the production design and the specification.

For more information please check our website  
[www.mpmaneurope.com](http://www.mpmaneurope.com)



CE



A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur

