



For Model No.  
BT 22


EN

User Manual

# User Manual


## DIGITAL MEDIA PLAYER

### Function Overview

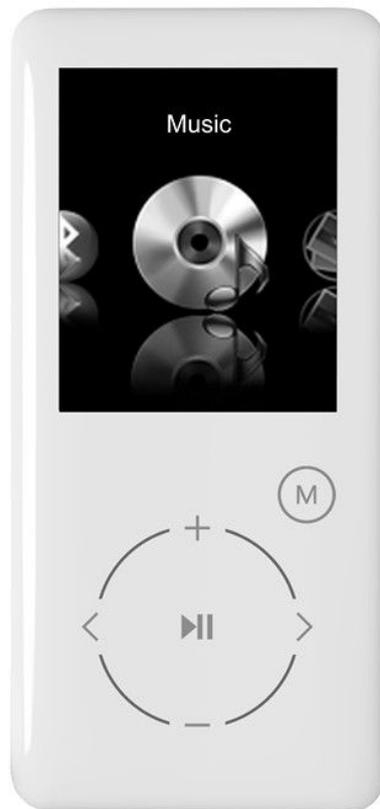

- BT22 is one MP3 player, the user can touch the button and select submenu
- 1.8 inch 128\*160 TFT screen
- Support audio format: MP3, WMA and WAV
- Support Micro SD card
- Support High-definition JPEG,BMP picture browse function
- Support Microphone record
- Support brightness adjustable
- Good timber, support 3D EQ surrounding effect, customized EQ
- Support multi languages
- USB2.0 high speed
- Support E-book function
- Support pedometer(Measures your steps, calculates distance, speed, calories)
- Support chronometer


## Button Function:

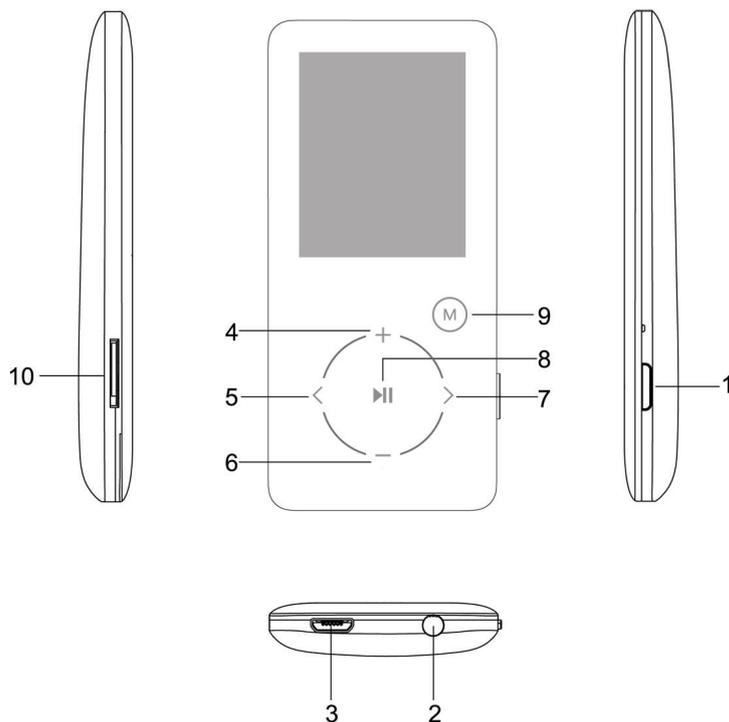

1. Power on/off or Lock on/off
2. Earphone Jack
3. Micro USB Jack
4. "+": Volume + and moving up
- 5 "<": Previous, Long touch "<": Fast backward playing
6. "-": Volume - and moving down
7. ">": Next, Long touch ">": Fast forward playing
8. "M": Confirm / Enter into submenu, play and pause
9. "M": Short touch: Exit to superior menu / Back
10. Micro SD card slot.

## Finger Touch operation:

Because the touch keypad is sensitive, it is very important for user to touch the keys in a correct way, please follow the operation as below:

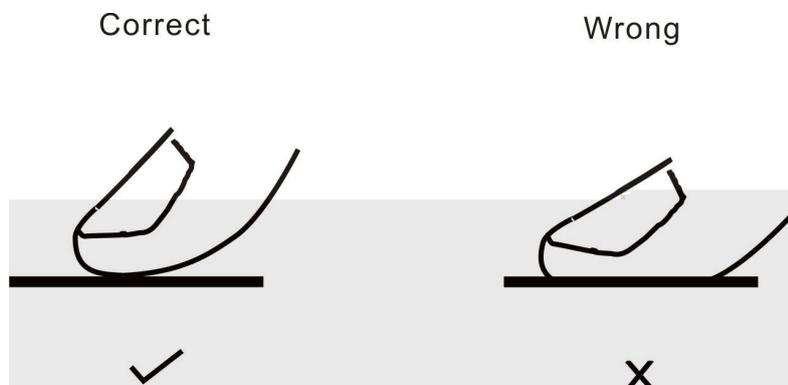


## Recharging the player

The player can be recharged by plugging USB cable into your PC. An icon will show up on the right while charging.

First turn on your PC, then plug the player into the PC using a USB cable.

## Main menu

When the player is turned on, there are 9 sub menus in the main menu. select the icon on the screen to confirm your choice.

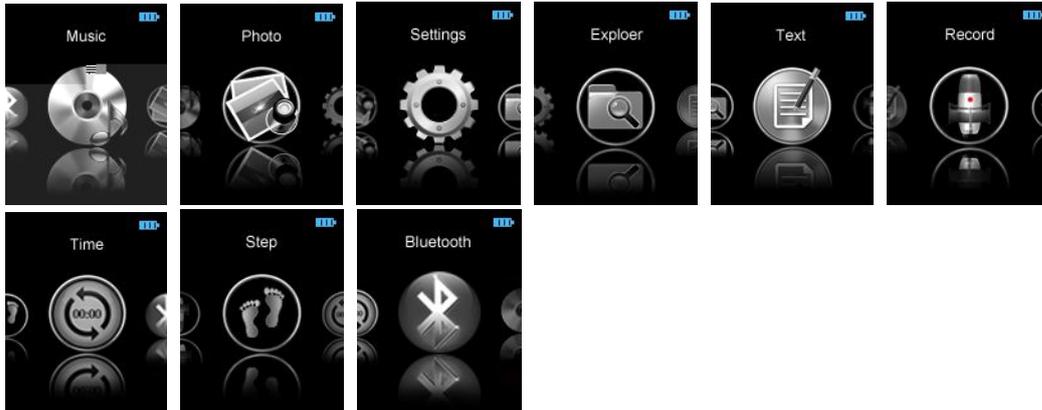

Available options:

Music : Select this option to listen to songs.

Photo : Select this option to browse and watch photos.

Setting : Select this option to change the system configuration.

Explorer :Select this option to read the file on the device.

Text:Select this option to read the text file.

Record: Select this option to record voice by the internal microphone.

Time:Select this option to calculate the time

Step:Select this option to calculate your steps while you are walking or running.

Bluetooth:Select this option to enter into bluetooth setting

## Music

Touch power button on the main menu to enter into music playing interface.

A.Submenu under playing status

Select music in main menu, touch power button to confirm selection enter into music submenu including :All Music ,Artist ,Album,Genre,Directory Listing ,RECORE FILE, My Favorite,Medialib Update,Breakpoint player.

The device can support lyric whose name is the same as MP3 file. For example, music format's name is "song.mp3" and LRC file's name must be "song.lrc", and they should be also in the same folder.

B. Under playing status with music, you can touch power button to stop playing and restart playing

## Photo

Under main menu, chose Photo and touch power button to photo mode,then choose the picture and touch power button to browse the picture file

In the picture main menu ,touch M button to exit view the picture file.

## Settings

Select Settings on the main menu to the setting submenu including: Time, Music, Radio, Record Settings, Auto Play Time, Display, System, Language and Step Profile.

The user can select the item to change their favorite setting.

## Explorer

Select Explorer on the main menu to enter into file browser interface, then choose music file, picture file, voice file to play.

## Text

Select Text on the main menu to enter into text interface, then choose the text file to read the text book.

## Record

Select Recorder in the main menu, touch power button to start recording or pause the recording and touch "M" button to saving the record file.

## Time

Select Time in the main menu to stopwatch interface, then touch power button to start timekeeping, when timekeeping finished, touch power button to stop it, press M button will start a new timekeeping.

## Step

Select step on the main menu, then touch power button to start pedometer working, after pedometer working, touch power button will begin the new pedometer working.

When using the pedometer, touch M button will enter into the submenu of pedometer including: History, Walk, Running.

## Bluetooth

Select Bluetooth on the main menu to enter into bluetooth interface.

After enter into Bluetooth menu, the Bluetooth will automatically turn on and search Bluetooth devices. BT devices will show in PAIRED DEV LIST. then choose the Bluetooth device to connect.

Turn on/off Bluetooth function: Touch "PRE" and "Next" button;

Scanning Bluetooth device: Long touch "Next" button;

Delete Bluetooth device: Long touch "M" button;



This is to certify that BT22 is in conformity with:

Council EMC directive 2004/108/EC :

Applicable standards:

EN55013:2001+A1:2003+A2:2006

EN55020:2007+A11:2011

Council R&TTE directive 1999/5/EC:

Applicable standards:

Article 3.1a) EN60065 :+A1 :2006+A11 :2008+A2: 2010+A12 : 2011  
EN62479:2010

Article 3.1b) EN 301 489-1 V1.9.2:2011 -09  
EN 301 489-17 V2.2.1: 2012-09

Article 3.2) EN 300 328 V1.7.1:2006-10  
EN60065:2002+A1:2006+A11:2008+A2:2010+A12:2011

Made in PRC

For more information please visit our website  
[www.mpmaneurop.com](http://www.mpmaneurop.com)