



**For Model No.
CONVERTER102**

EN

User Manual

Product Features

OS Window 10

10.1" IPS LCD multi touch screen

Quad core

DDR3L 2GB, eMMC 64GB

Bluetooth 4.0

Camera front 2.0M, rear 2.0M

Wi-Fi and G-sensor

Support USB host and OTG

Micro SD (support SDHC)

External speakers

2 in 1 Keyboard

TV-out

Cautions

- Do not press the surface of touch screen using sharp object. Touch screen can be stabbed or pressed, may not work or cause malfunction.

- Be careful of using, touch screen and display can be damaged if it undergo external shocks or pressure.

In case of external damage or transformation, customer needs to pay repairing charge even though in warranty period.

- Do not give excessive shock to equipment or drop it.

- Be careful of long time using with high volume. It can occur hearing damage.

- Do not discretionally disassemble equipment as you can't receive free warranty service.

- Equipment can be damaged excessively or loss date if the equipment cable is disconnected or powered off during firmware update and file uploading or downloading.

- Do not use in cold, wet and dusty place. It may occurs external transformation or screen condensation, and malfunction.

- We don't take responsibility for data loss stored in equipment. Please use equipment after back important file up.

 
- Please avoid using in dusty environments as dust may goes into inside of equipment or screen.

- There may be some febrility during charging or using program which has high workload because of high-speed operation CPU.

- B grade equipment (Broadcast and Communication equipment for residential use): As EMC equipment for residential use (B grade), main purpose is using in residential, usable in all area.

This equipment has possibility of interference, cannot support service related with human life safety.


Name of Parts




1. Speaker : Output sound
2. DC charging port : Supply PC with power
3. TV-out : Connect with TV, output screen larger on TV.
4. USB port : Connect USB cable
5. Earphone Jack : Connect earphone up with PC
6. Power Button : Turn on/off
7. Volume - : Reduce PC volume
8. Volume + : Raise PC volume
9. Front Camera : Supports video and photo shoot
10. Rear Camera : Supports video and photo shoot
11. Micro SD Slot : Insert Micro SD card into PC

Turn on PC

 1. Press Power button  to turn on PC

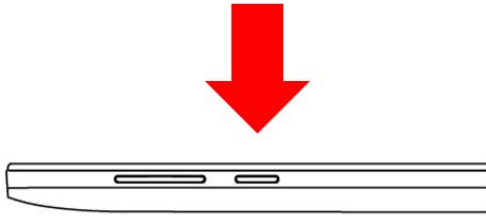

Turn off PC

 
1. Touch Power icon  on the bottom left corner of the screen



2. Touch "Shut down" to turn off PC

Understanding the Screen

Desktop mode

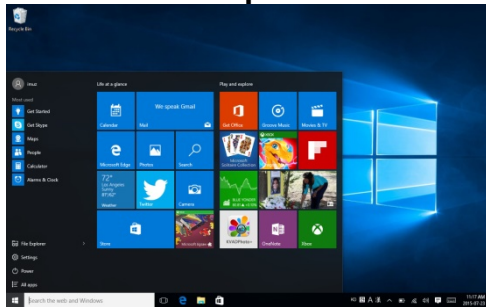


Tablet mode




How to change Desktop mode to Tablet mode

 1. Slide to the left from the right side of screen.

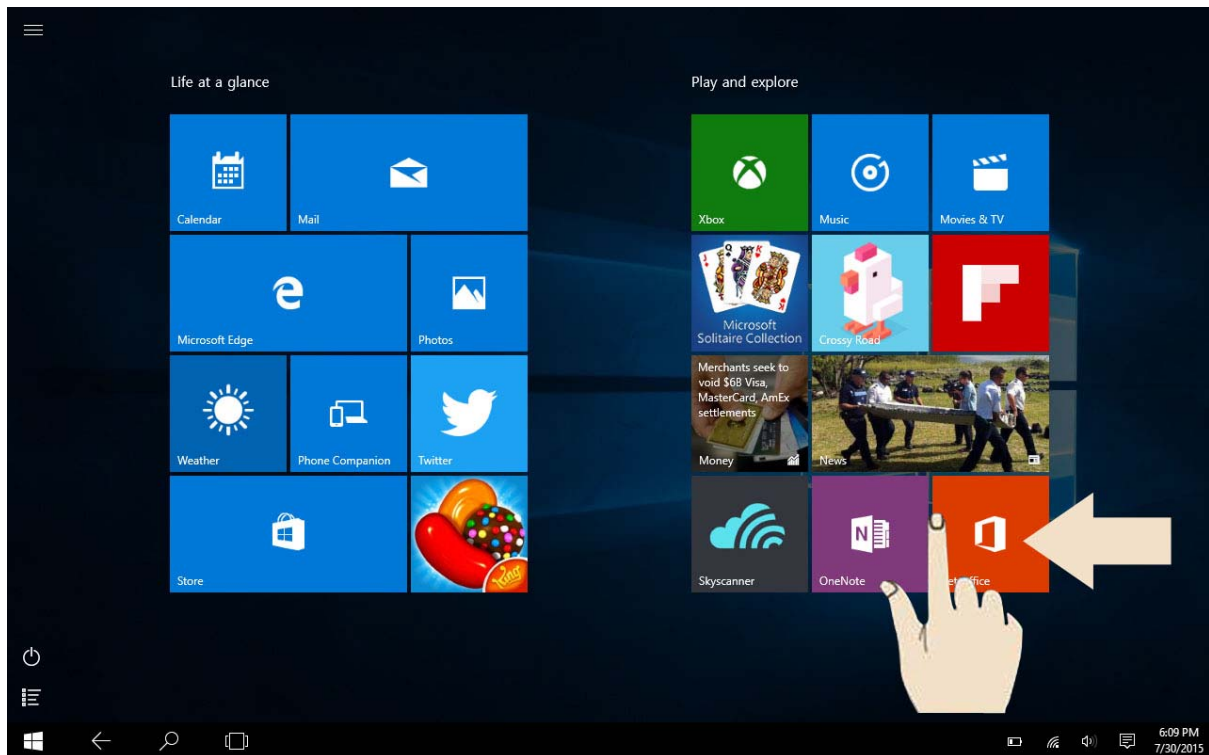


 2. Touch “Tablet mode” to change between Desktop and Tablet mode.

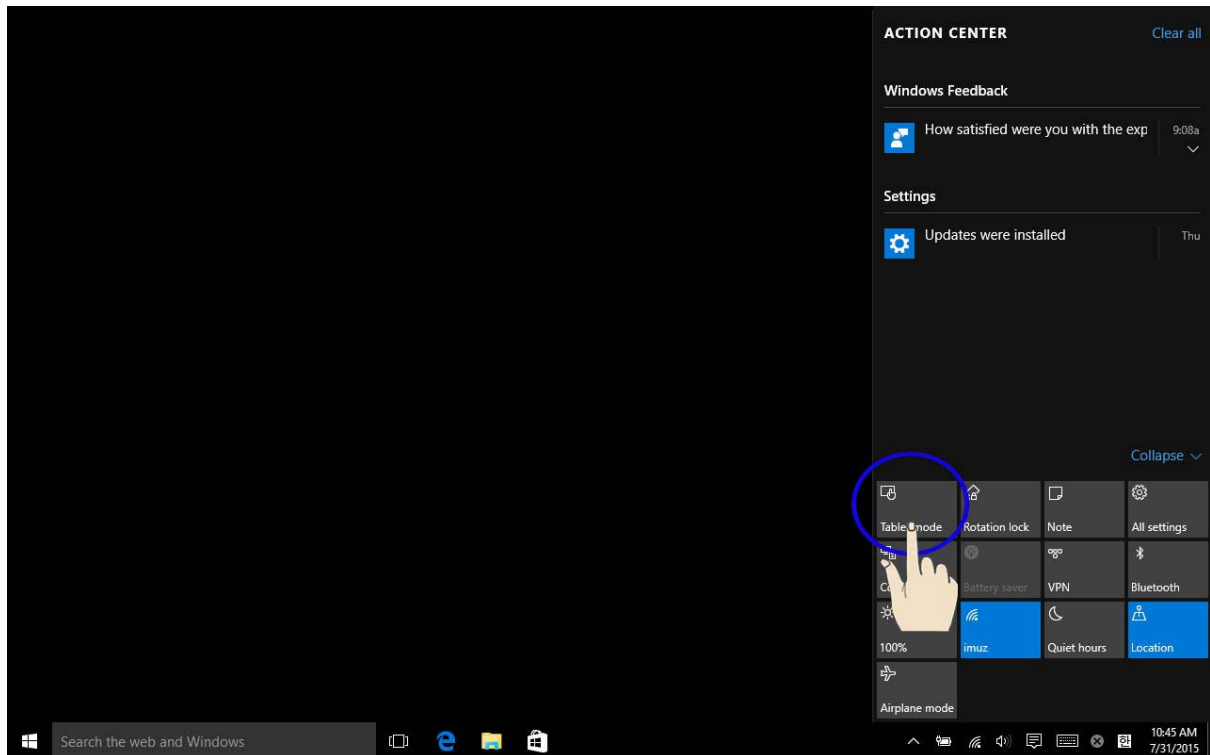


Charm menu on Tablet mode

 1. Slide to the left from the right side of screen.

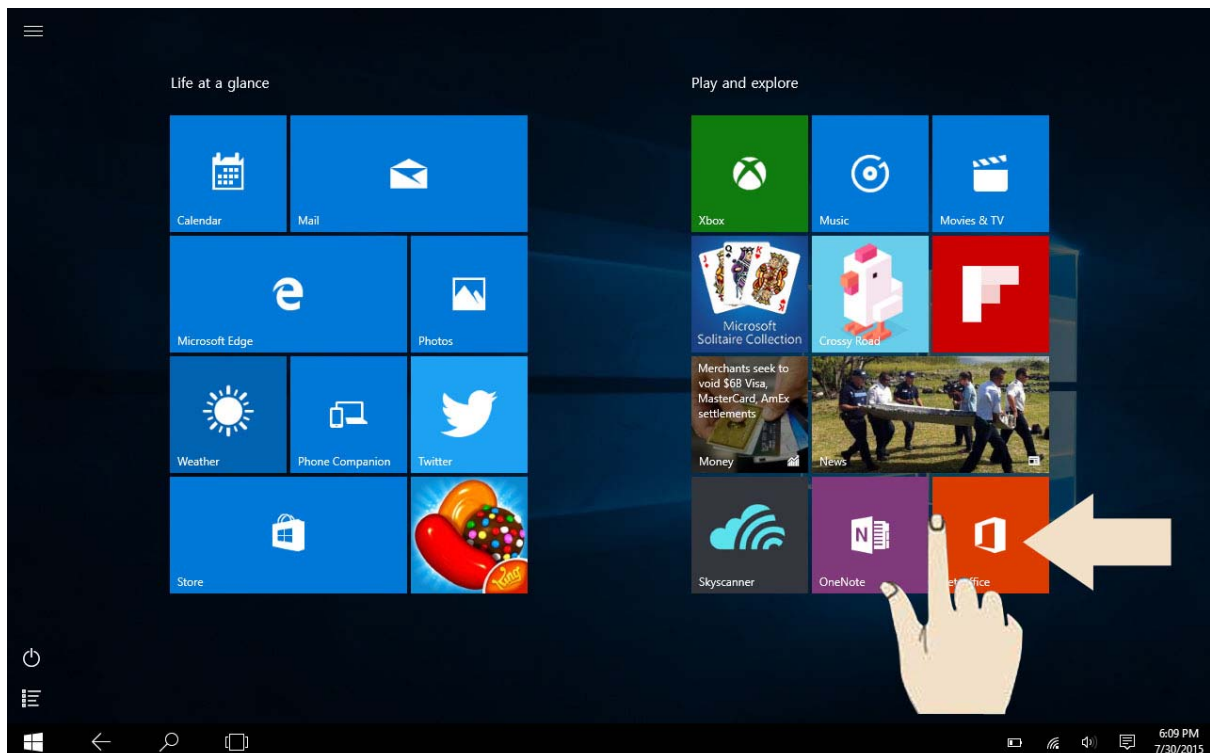


 2. "Tablet mode", "Rotation lock", "Setting", "Wi-Fi" and other functions comes up.

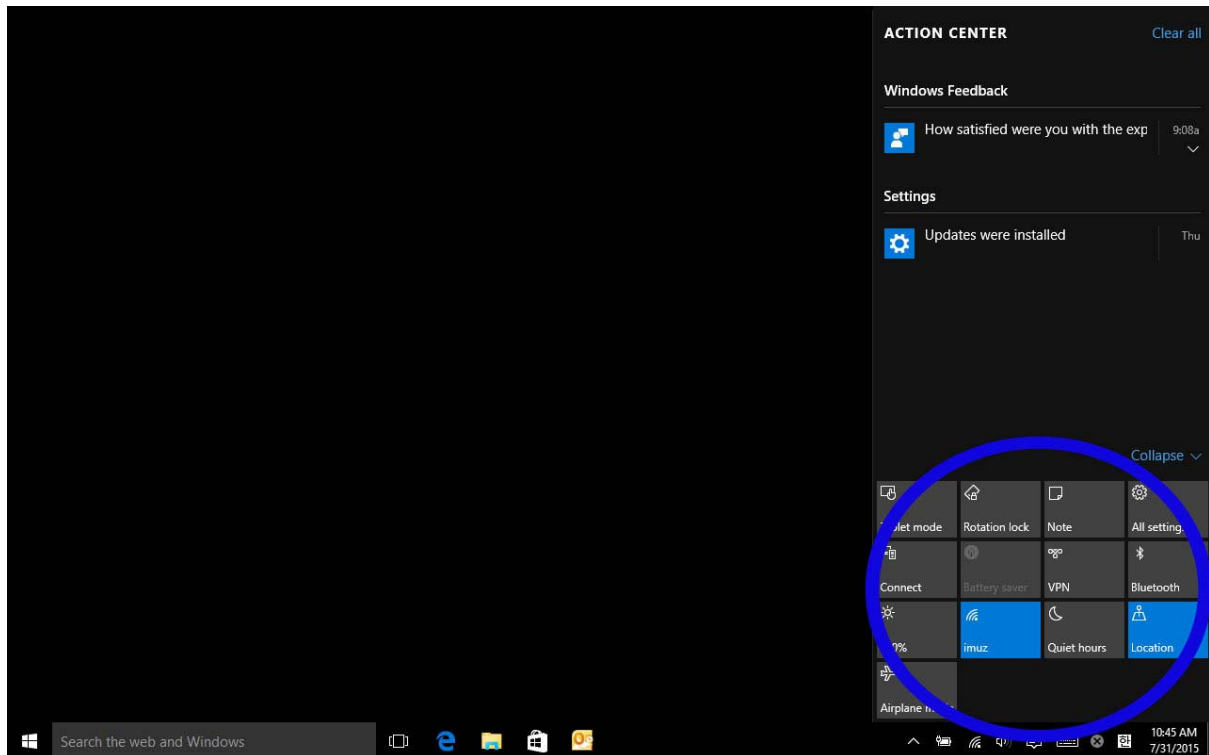


All Applications menu on Tablet mode

 1. Touch Application icon on the bottom left corner of screen.

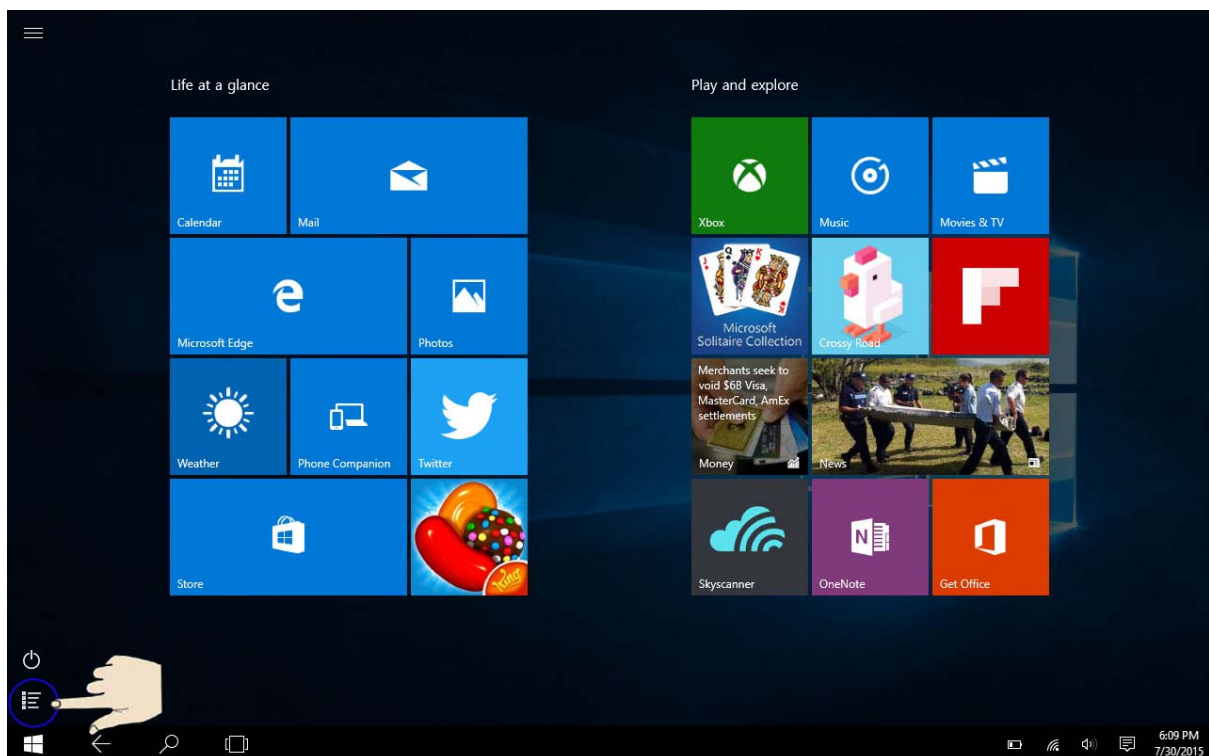

 2. All applications comes up on the screen.

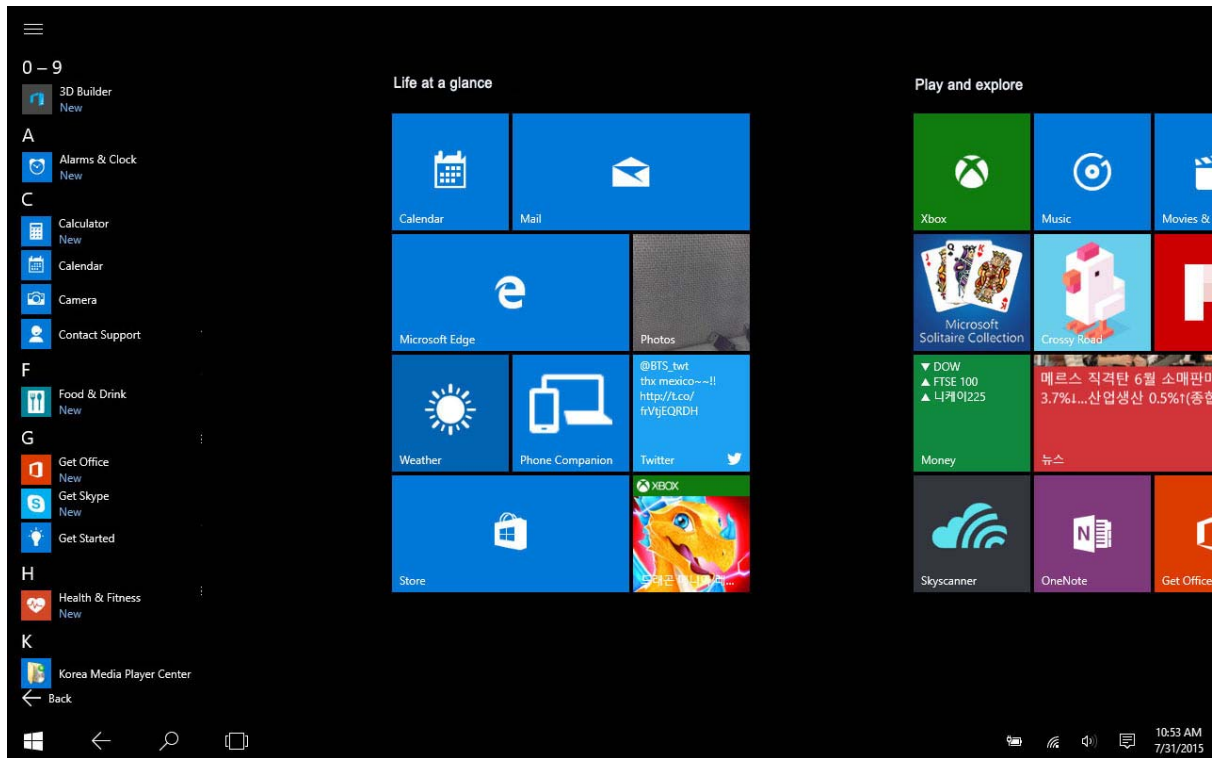


Micro SD card slot

Micro SD is the removable drive and can move various data easily and expand capacity of PC

Using Card

 1. Insert the Micro SD card into Micro SD card slot

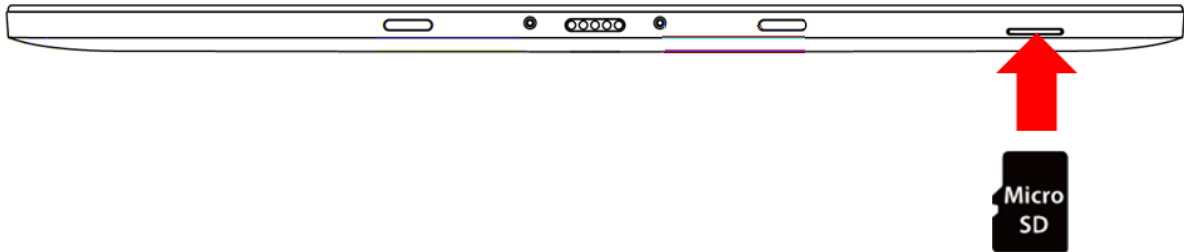

2. Message in top of right side

8G (D:)
Choose what to do with removable drives.

 
3. Click and touch 'Open folder to view files'
4. Now you can save, move and delete data on Micro SD card.
5. After finish use, press inserted Micro SD card and Micro SD card sticks out.

Setting Volume

Volume setting is available by button and the volume icon on the bottom right corner of screen.


Setting Volume by button

Press the volume key on top of PC and set volume

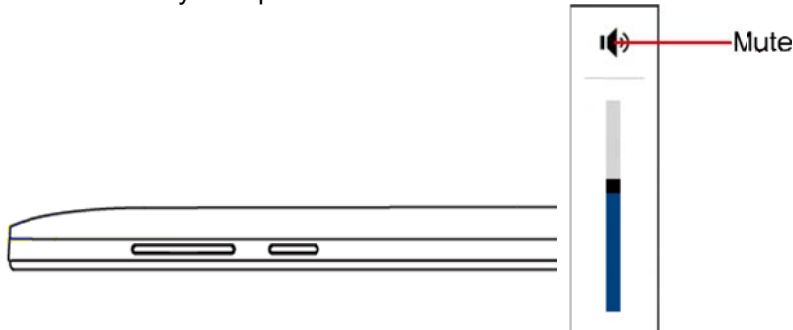

Setting Volume by volume icon


Touch the volume icon on the bottom right corner of screen.

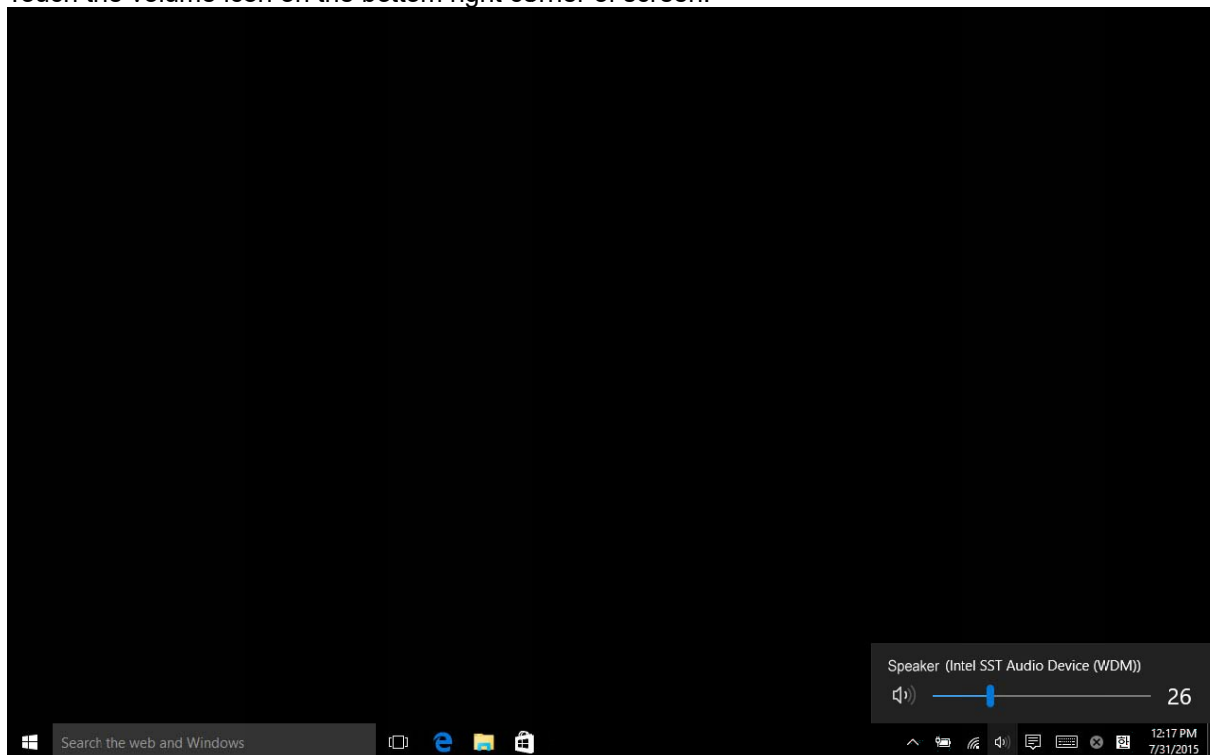 

Setting LCD brightness

※ The brightest setting when use adopter, and dark setting when use battery to increase battery using time more longer

 1. Open the Charm menu.
2. Set the screen brightness by touching Brightness icon.

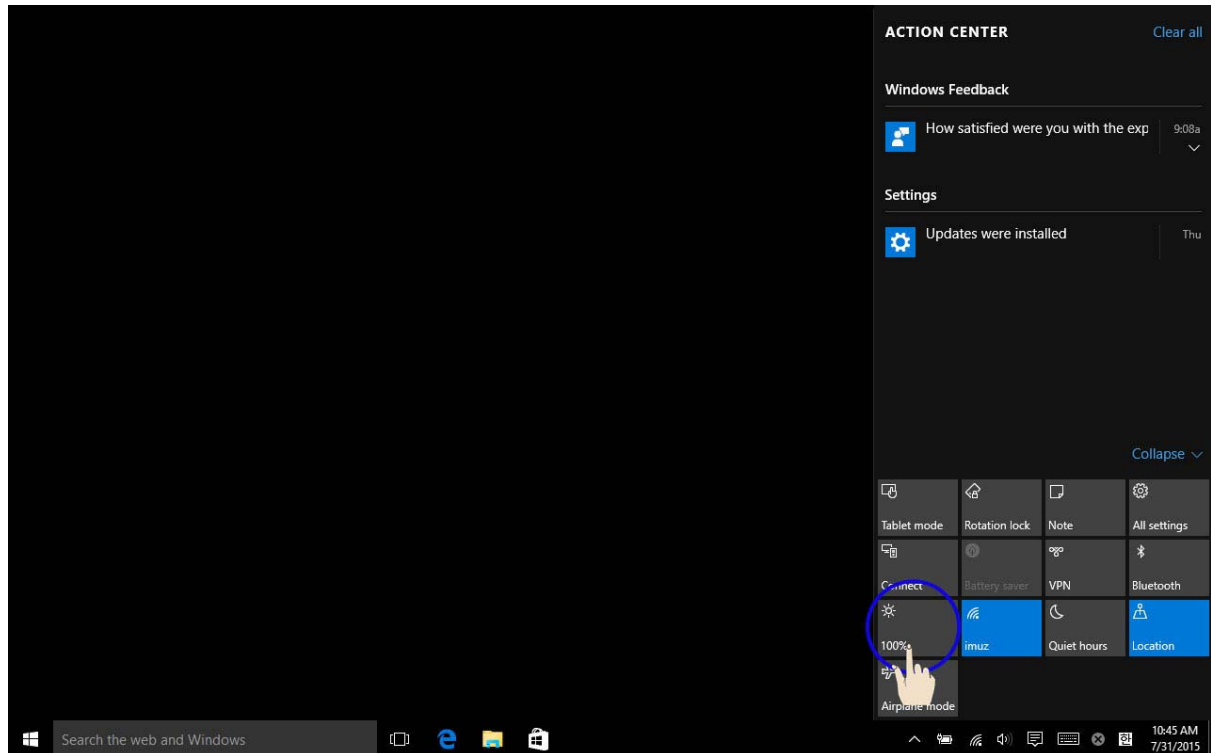


Wireless Network (Wi-Fi)

Can simply connect to wireless network if there are Wi-Fi nearby.

Connecting wireless LAN

 1. Touch Wi-Fi icon on the bottom right corner of screen.

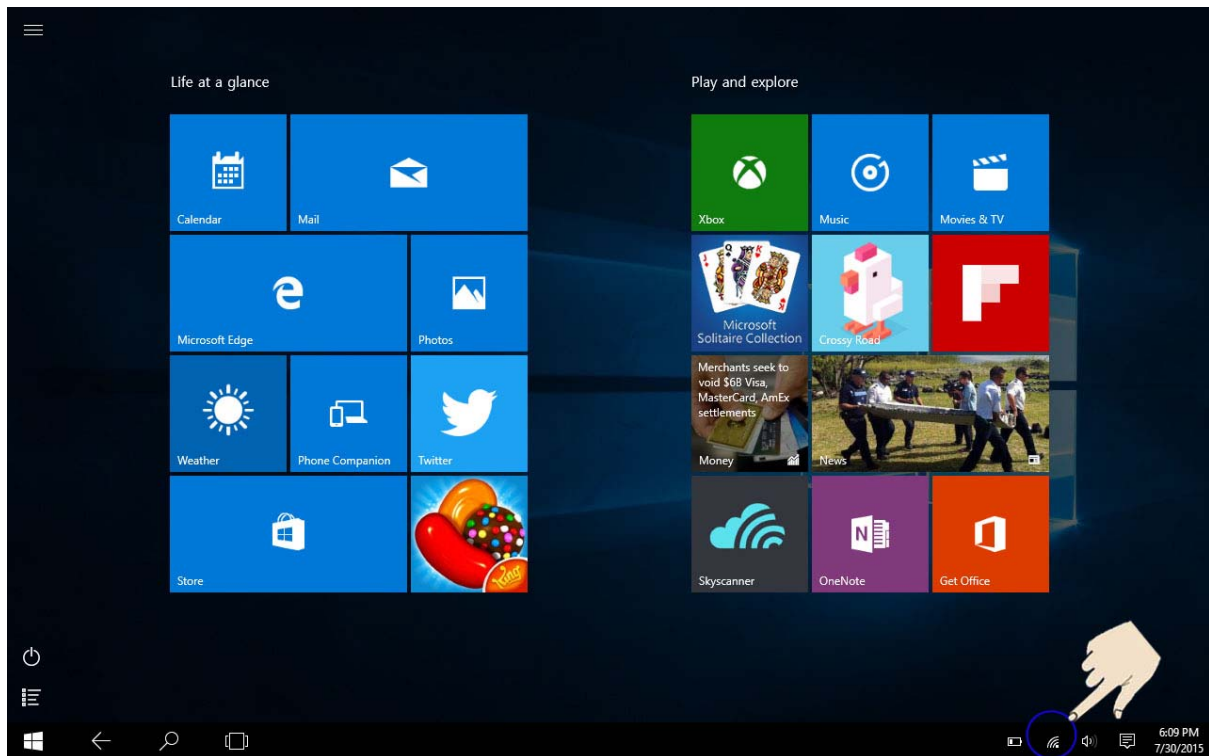

2. All available Wi-Fi list will be shown up. And touch desired Wi-Fi on the list.



3. Touch Connect.

 
※ Network security key need to be checked by network manager

Battery

If use PC with battery, not adopter, please refer to this description

Charge the battery


Please plug charger in PC charger port

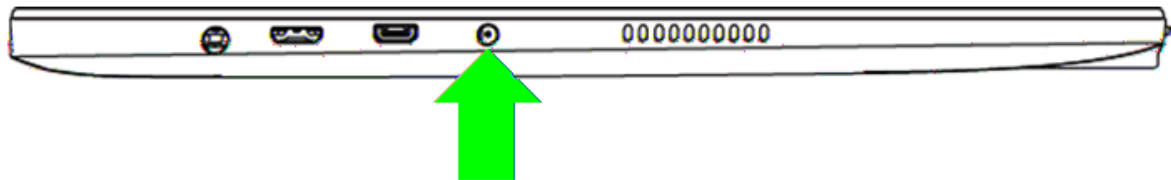

Check battery remains

Can check battery remains

1. Check on the taskbar

After separate charger port from PC, Touch battery icon  on the bottom right corner of screen.

Battery use period information

As a consumable, battery use period is decreased if is used long time

If hour of battery use is decreased to half than the time of purchase, please change to new one

If battery is not in use for long periods of time, please keep it when remains 30-40%

Can extend the battery life if you keep it according to above

[Caution]

If don't change the battery correctly, there is a risk of explosion

Used batteries, please discard according to supplier's instruction

Specification

OS	Window 10
CPU	Quad core Intel baytrail-T CR 1.33~1.83GHz
RAM	DDR3L 2GB
Display	10.1" 800x1280 capacitive multi-touch screen
Multi touch screen	5 point Multi touch screen
Built-in flash memory	64GB
Audio port	3.5ø
USB	Tablet - 1 x 5pin micro USB (2.0 high speed) Keyboard - 1 x 5pin Full size USB port (2.0 high speed)
Micro SD	Micro SD card
Speaker	Frequency response : 20Hz – 20k Hz, N/S : >90%
TV-out	Yes
G-Sensor	Yes
Camera	2M pixel (Front), 2M pixel (Rear)
Wi-Fi	802.11b/g/n
Bluetooth	4.0
Battery	3.7V Lithium Battery
Power	5V 2A 2.5 ø DC connector
Dimension	252.1 x 166.1 x 9.6mm

For more information please check our website

www.mpmaneuropa.com



A pleine puissance, l'écoute
prolongée du baladeur peut
endommager l'oreille de
l'utilisateur