



**For Model No.
MPQC124i**



User Manual

This manual contains important safety precautions and information of correct use.

Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions.

Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.
- The device shows on the top right corner.

Specification

Software

Hardware

10.1 efinition IPS LCD Touch Screen (800x1280 pixel)
Capacitive multi-touch (5 touch) point
CPU : Quad core MT8163 processor
RAM : DDR3L 1GB (3D accelerator possible for 3D games)
Wi-Fi (IEEE802.11 a/b/g/n,) for internet connection
USB host for OTG function
G-sensor
Micro SD card slot recognizing up to 32GB

Android 6.0
Google browser
Wi-Fi connection
e-Book function (all e-book formats supported by application)
1080P HD file playback
VOIP phone function with Wi-Fi connection
Possible to view/edit MS office files by application
Video : AVI, RM/RMVB, FLV, MPG4-1, MPEG-2 etc.

Built-in speaker & Built-in MIC

1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.
Short press power button to turn on/off the screen.
(Standby mode. Refer to 3. below)

2. Desktop

After turning on the device, desktop displays with shortcut icons and notification bar.

3. Standby mode(Screen off mode) / Unlock the screen

Short press the power button to turn on/off the screen (standby mode on/off). After standby mode off, swipe up the lock icon in order to unlock the screen.


4. System Setting

1. Swipe down from the top of the screen.


2. Touch notification bar on the top.

3. Touch the setting icon .

4. Setting menu shows up.

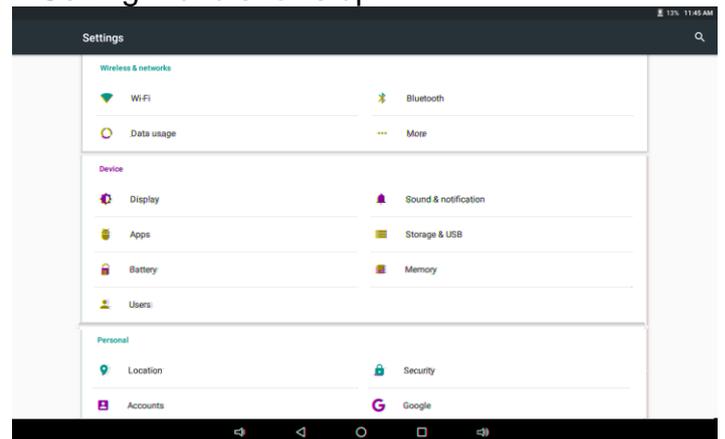


Wi-Fi

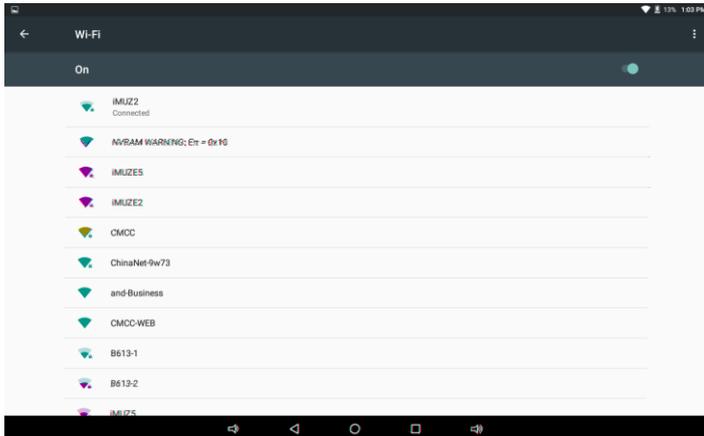

Turn On Wi-Fi.

The device will automatically search the available Wi-Fi signals. Select the network you want to connect with.


Bluetooth

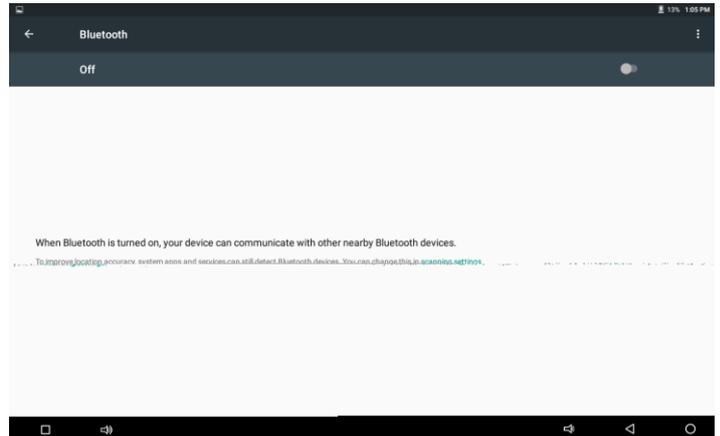

Turn On Bluetooth.


The device will be visible to nearby devices while Bluetooth is turned on.

Display

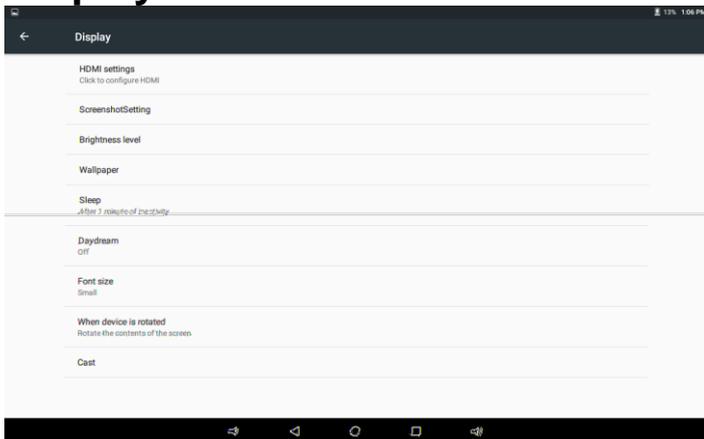


Set up each settings as you wish.

Sound & Notification

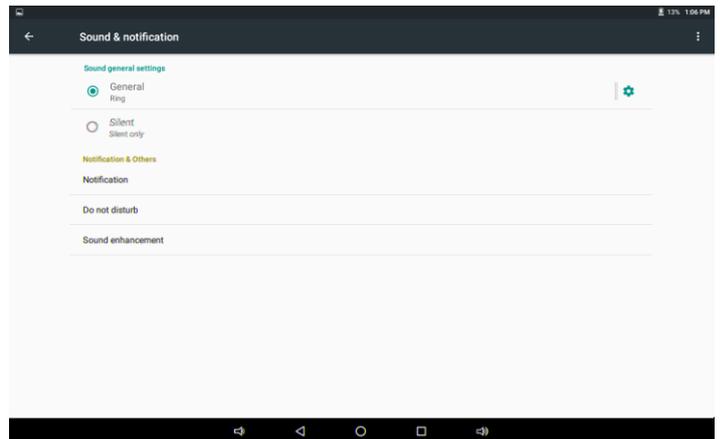


Set up each settings as you wish.

Storage

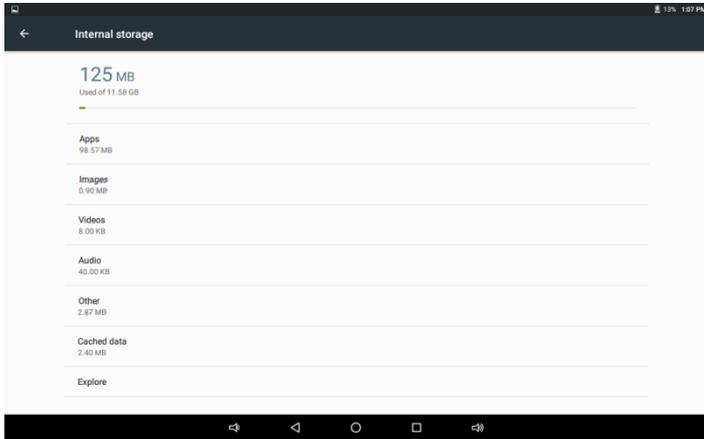

Check the device memory and Micro SD card status.

Battery

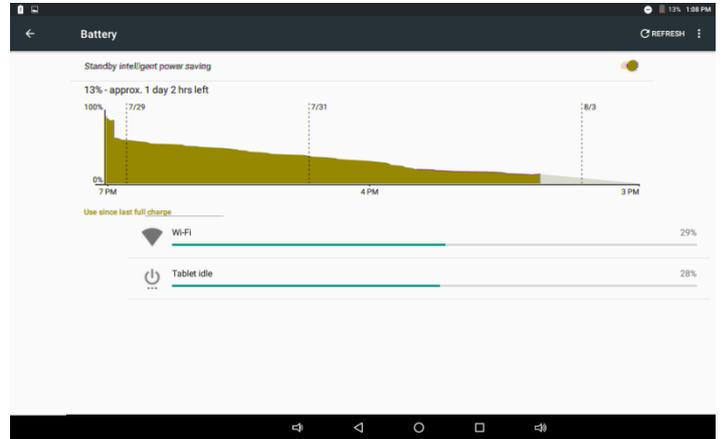


Check the battery usage.

Apps



Manage downloaded or running applications.

Apps Uninstall

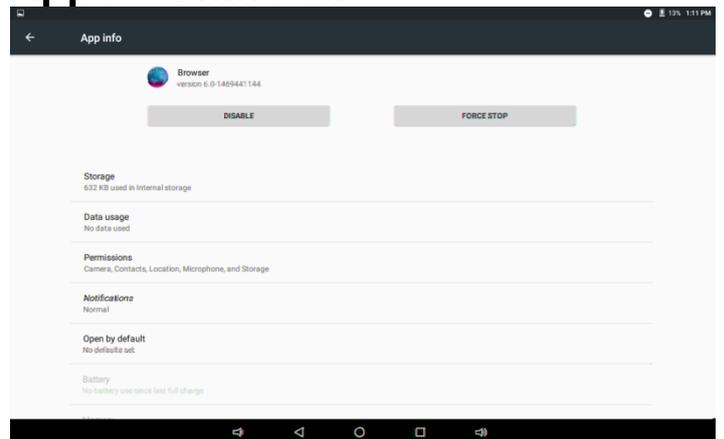

Touch the application to manage.
Touch disable the selected application.

Location

Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

Security

Manage security options on the device.

Setting for the screen lock, Password visibility, Unknown sources and etc.

Accounts

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

Language & input

Language- Choose your preferable language.

Keyboard & input method Change keyboard & keyboard settings.

Speech Manage settings for Voice input, Text-to-speech output, Voice control.

Date & time

Set date & time and format

About tablet

See status, legal information, ETC

5. How to connect/disconnect the device with/from the computer

Connect the device with PC.

Connected as a media device or Connected as a USB storage show up as below.

6. How to install Applications(.apk file) into the device

Method 1.

1. Connect the device with internet. See above [Wi-Fi] in order to connect internet. Connect the device with PC
- 2.
3. Follow the instruction on the screen for installation.

Method 2.

1. With your computer, search application le(.apk) that you want to install into the device.
2. Download the le(.apk) into your computer.
3. Connect the device with your computer.
See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. find .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.

Note

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications.

In case of any problems including legal issues from the breach by end-manufacturer shall not be responsible.

7. How to change wallpaper and widgets

On Desktop screen, touch and hold somewhere in the screen.
Select WALLPAPERS or WIDGETS

WALLPAPERS

Select one of categories of wallpaper.
Select one you desire and press Set wallpaper.

WIDGETS

Touch and hold your desired widget icon for 1 second.

And drag it to desktop screen.

8. How to make desktop icons

1. Touch the Apps icon on the desktop screen.
2. Touch and hold your desired application for 1 second.
3. And drag it to desktop screen.

Specification

-	
	YES (Mini HDMI Type C)
	-
-	
-	2.4/5GHz dual band
	-
	-
	264.5 x 164.5 x 10.8mm



CE