



For Model No.



This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

1. Please don't be in high temperature, moisture or very dust place
2. Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
- 4 The battery power ICONS shows have no power
- 5 The system automatically shut off, startup after power off soon
- 6 Operation buttons no response
- 7 The machine that the top right corner show red icons

1. When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
2. For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
3. Don't disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products
4. Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
5. Please don't using the Tablet PC when you in driving or walking down the street,
6. USB just only be used for data transmission

Name	function
1 Power and lock Key	Hold and press to turn on or turn off the unit,Briefly press to turn on or turn off the screen.
2 Volume +	Press to increase the volume
3 Volume -	Press to decrease the volume
4 Earphone Jack	To connect your earphone
5 MICRO SD card slot	To insert your TF card
6 Micro USB	Connect to a computer via a USB cable to transfer data (music,videos,photo,ect.),USB OTG,supports mouse, Keyboard, USB flash disk,etc,with a converting cable.
7 HDMI Jack	Mini HDMI TV output to connect an external screen.
8 Reset	press RESET button,Tablet will force to shutdown

The tablet has a built-in rechargeable Li-polymer battery.

1. To charge connect the AC power adapter to the USB jack on the right side of the tablet.
2. The battery icon shows the battery status and charging status

3. The tablet can be used even if the battery is being charged.
the above icons indicate the different level of electricity left in the battery
4. no replacement of battery without authorization, or the explosion hazard might happen.
5. Recharge it for at least half hour if it has been idle for long time and fails to start itself.
6. Regularly recharge it at least one time monthly
7. $40^{\circ} - 5^{\circ}$ is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly

the battery might contain the polluting material, please give it to the official recycling-station before disposing the tablet pc, and don't litter.

ON:

press the button for continuous 5 seconds until the tablet turns "ON".

OFF:

1. Press the button for continuous 5 seconds and it will appear

2. Click Power off to power off the tablet

Screen Lock

This feature locks the screen, at the same time turn OFF the screen's backlight after a few seconds.

Screen locks when:

1. System is idle.
2. Manually activated by pressing the Power button once.

Screen unlock :

The Home screen will look similar to the picture below. It is actually five screens, each of which can have a different layout of icons. To switch between screens, simply slide your finger left or right across the display. The status bar and navigation buttons are always visible, no matter which Home screen you are currently viewing.

The Desktop contains shortcuts to commonly used applications and widgets. To change the screen icon or quickly search the World Wide Web using Google.

The Home icon will launch the Application menu.

The status bar displays system information, such as current time and battery level. To change or expand the status bar for more detailed information.

The Home button moves back one screen to the previous menu/page.

The Home button returns immediately to the Android desktop.

The Home button displays a menu of recently opened applications.

The button on decrease the volume.

The button on increase the volume,

Settings Menu

The settings menu allows you to adjust the system configuration.

To change settings:

1. To check the "Settings" menu icon on the Application menu. The Settings menu will open.
2. Guide your finger or do on the left side of the screen to scroll through the list of available categories.
3. To check a category like other options on the right side of the screen.

Wi-Fi - Connect/disconnect from wireless networks, i.e. connections as

Data usage - Enable/disable mobile data, i.e. current usage, set mobile data limits (note: this function is available only on devices supplied with 3G card)

Sound - Change volume, choose sound, screen lock sounds etc

Display - Change brightness, wallpaper, sleep settings, font size etc

Storage - Manage NAND and Micro SD card, i.e. available capacity etc

Battery - See battery status and power-on time

Apps - Manage applications, running services etc

Accounts & sync - Switch synchronization on/off, manage accounts etc

Location services - Change appropriate location detection, improve search results

Security - Change screen lock type, encryption, password, credentials storage etc

Language & input - Select language, add to the dictionary, edit on-screen keyboard settings, local search, etc

Backup & reset - Backup & restore data, perform factory reset, etc

Date & time - Set date, time zone, time, clock format etc

Accessibility - Set up large text, audio-visual screen, speak pass word etc

Developer options - Advanced functions for Android developers - debugging, HDCP check etc

About - Information about your Android device

1. Insert the TF card into the TF card slot. Gently push TF card into slot until it clicks into place.
 2. A prompt will be seen on the screen saying “Preparing SD card”
-
1. Close all applications and documents which have been opened from the TF card.
 2. Select “Setting” and find “Storage” then click “Unmount SD card”.
 3. A prompt will be seen on the screen saying “SD card safe to remove”
 4. Gently press the TF card to remove and pull out the TF card.

Note: Insert the TF card in correct position, otherwise it will damage the card and the slot.

The tablet has a software keyboard which automatically show up when you tap the place on screen where text or number are to be entered.

The touch screen responds to finger touch.

Note: don't place any object on the touch screen for it may damage or crush the screen.

Single Click: single click one icon to choose the icon or option you want.

Long Press: press and hold one icon to make appear a menu related to the executed function (if available).

Drag: drag on the screen and you can move between magic cube sides or drag the application icons into the shortcut bar.

Note: Turn on your Tablet before connect the Tablet to PC by USB cable.


1. Use USB cable to connect MID with computer. System will notice USB connected on bottom of screen.
2. Press USB connected to pop up, then click Turn on USB storage, click OK.
3. Then the USB connection has been successfully.

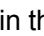
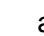
-
1. Select “ Settings”
 2. Select “Wi-Fi” and slide OFF to ON status.


3. All detected wireless networks in the area will be listed, Click to select desired wireless connection.
4. Enter WEP key or network key if necessary.
5. Once connected to a wireless network, settings will be saved
6. Wireless icon will appear on the taskbar when connected successfully.


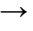
Note: when the tablet detects the same wireless network in the future, the device will connect to the network automatically with same password record.

Connect to the internet and launch the browser.

Touch the icon  to enter camera mode and the interface is shown as follows:

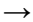
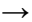
- 1.Touch the icon  in the middle to take photo
2. Touch the icon  and you can switch camera mode to camera recording mode.

All running applications take up system memory and will slow down system response. Please shut down all  to release memory and get the system speed back to normal.

To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the  → and the interface is shown as follows.

Tap the application you want to close. A pop-up window will be displayed. Tap “Stop” to close that application.

1. Press and hold the power button for 5 seconds and the device will be powered off.
2. Press the reset button on the back and the device will be forced to be powered off.

If you want to reset the factory setting and erase all materials, please press  →  →

****Please use this function carefully.**

For more information please check our website
www.mpmaneuropa.com

