This manual contains important safety precautions and information of correct use.
Please be sure to read this manual carefully before use so as to avoid any accidents.
Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.
Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions.
Select a proper volume to avoid ear problem when using earphones.
Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.
Be sure to use the provided chargers and accessories in the package.
Be sure to charge the product when the following situations take place,
- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.
- The device shows on the top right corner.

Specification

Hardware

10.1 High Definition TN LCD Touch Screen (1024x600 pixel)
Capacitive multi-touch (5 touch) point
CPU : Quad core cortex RK3126 processor
RAM : DDR3 512MB (3D accelerator possible for 3D games)
Wi-Fi (IEEE802.11 b/g/n) for internet connection
USB host for OTG function
G-sensor
Micro SD card slot recognizing up to 32GB
Built-in speaker & Built-in MIC
5V power adapter
Compatible with keyboard, mouse
Dimension : 260.1 x 149.5 x 9.5 mm

Software

Android 5.1
Google browser
Wi-Fi connection
e-Book function (all e-book formats supported by application)
1080P HD file playback
VOIP phone function with Wi-Fi connection
Possible to view/edit MS office files by application
Video : AVI, RM/RMVB, FLV, MPG4-1, MPEG-2 etc.
Audio : MP3, WMA, AAC, WAV etc.
Photo : JPEG, BMP, GIF, PNG, TIFF

Name

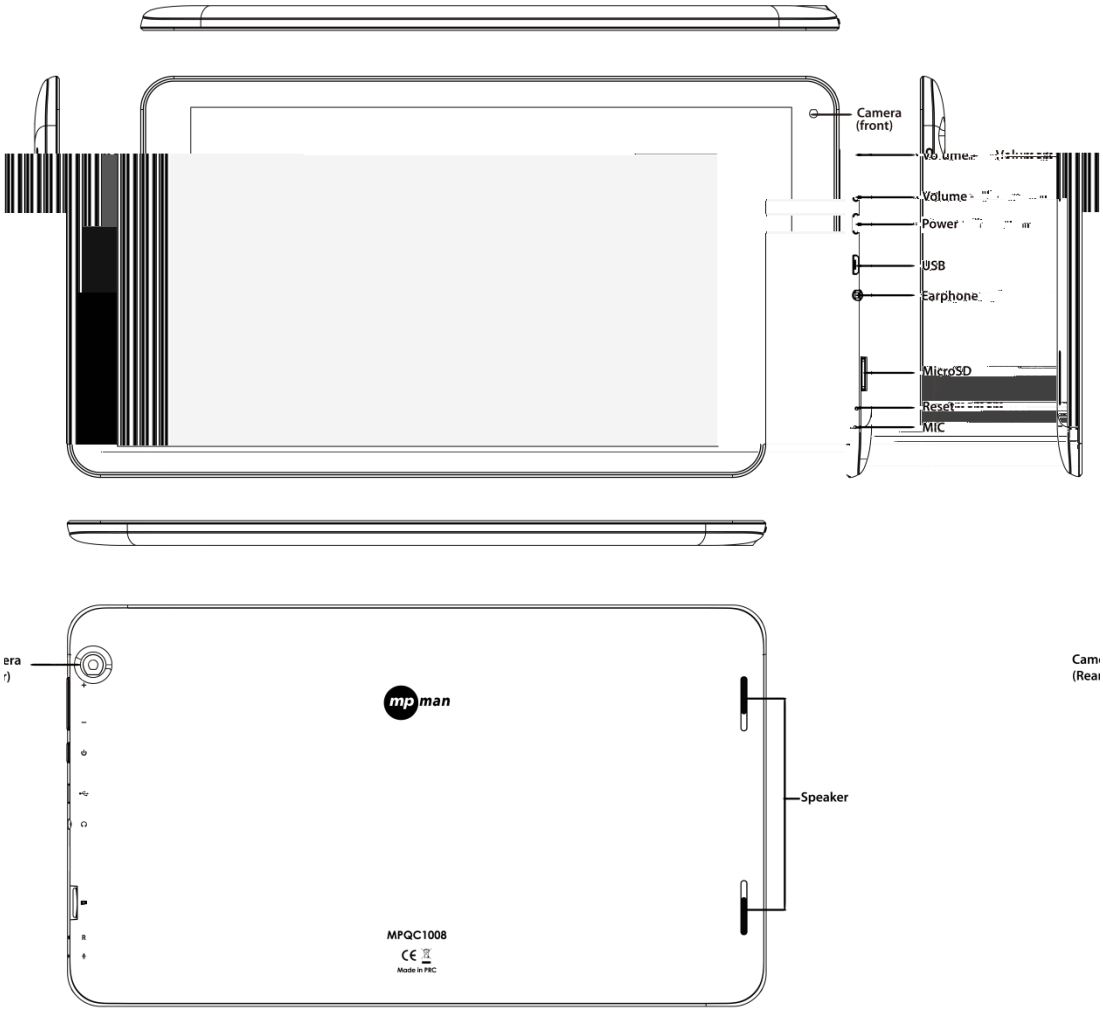

Important Notice

- If the device is freezing or stuck, press the reset button(a small hole) located at left side of microSD card slot. Another way to turn off the device by force is to hold pressing power button for more than 10 seconds

- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

- h files.

1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.
Short press power button to turn on/off the screen.
(Standby mode. Refer to 3. below)

2. Desktop

After turning on the device, desktop displays with shortcut icons and notification bar.

3. Standby mode(Screen off mode) / Unlock the screen

Short press the power button to turn on/off the screen (standby mode on/off). After standby mode off, swipe up the lock icon in order to unlock the screen.

4. System Setting

1.Swipe down from the top of the screen.

2.Touch notification bar on the top.

3. Touch the setting icon .

4.Setting menu shows up.

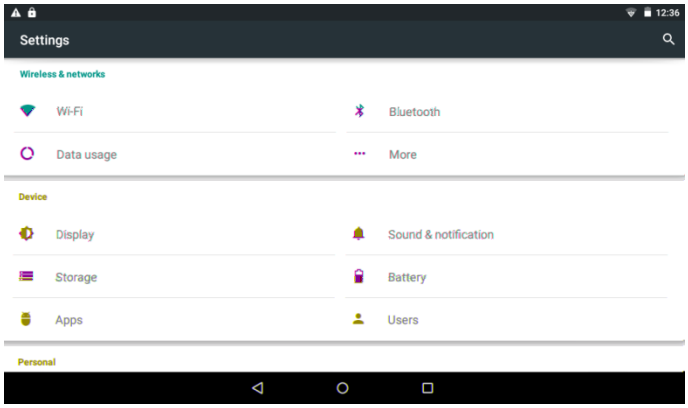

Wi-Fi

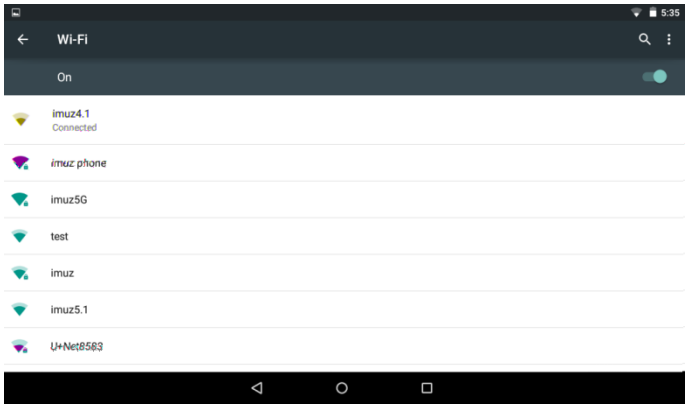

Turn On Wi-Fi.
The device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

Bluetooth

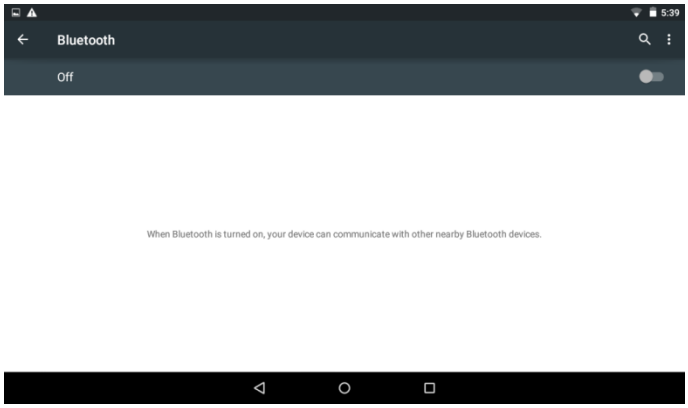

Turn On Bluetooth.
The device will be visible to nearby devices while Bluetooth is tunred on.

Display

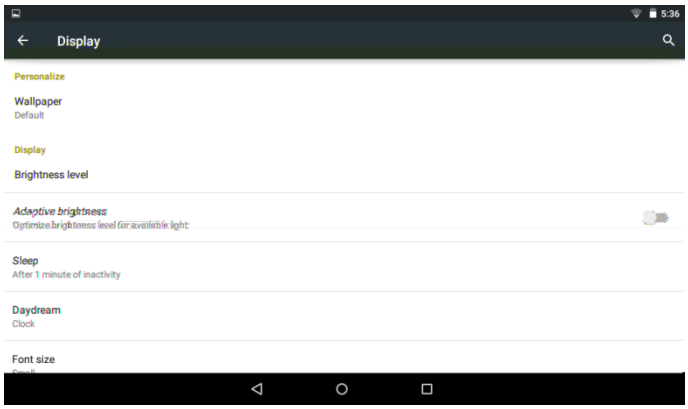

Set up each settings as you wish.

Sound & Notification

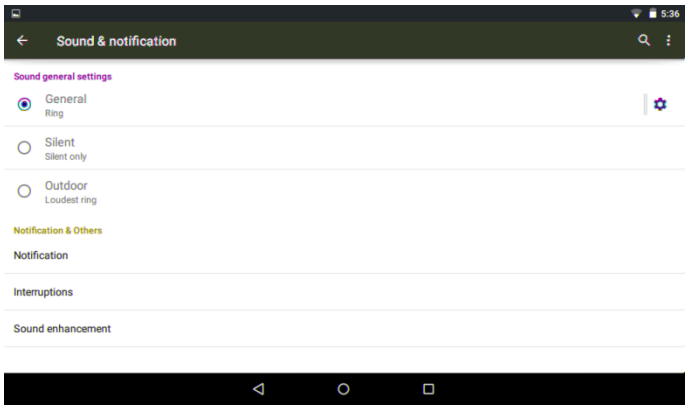

Set up each settings as you wish.

Storage

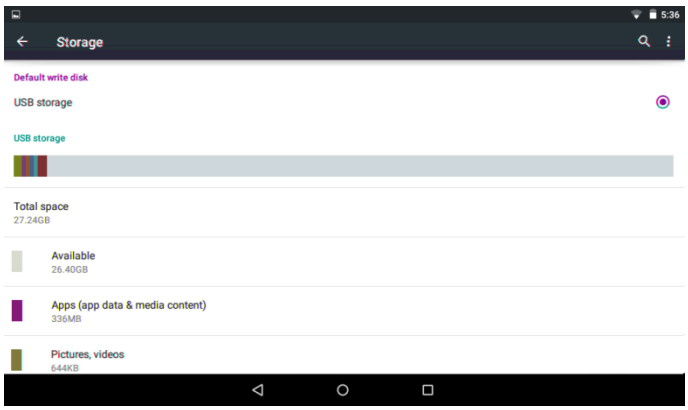

Check the device memory and Micro SD card stauts.

Battery

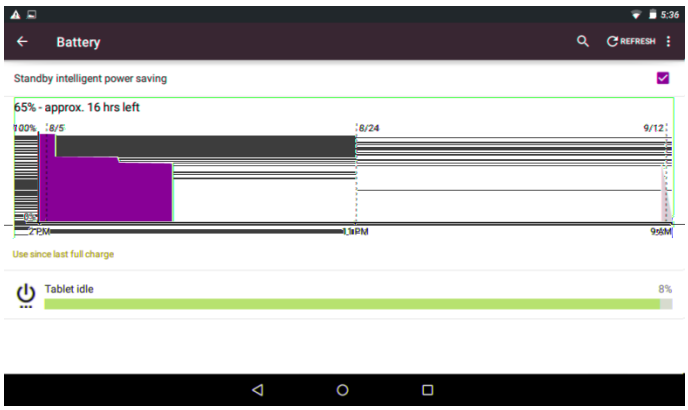

Check the battery usage.

Apps

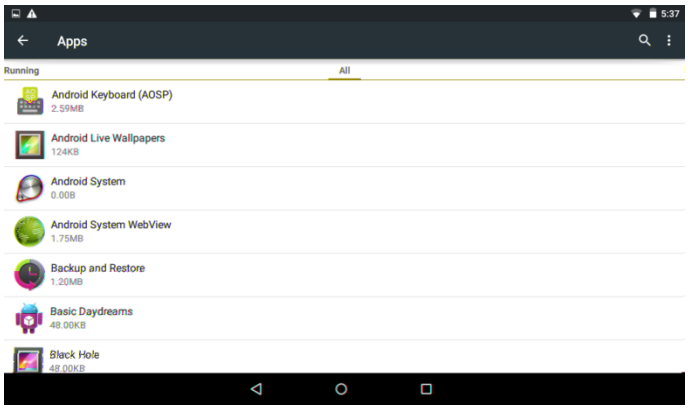

Manage downloaded or running applications.

Apps ±Uninstall

Touch the application to manage.
Touch uninstall the selected application.

Location

Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

Security

Manage security options on the device.
Setting for the screen lock, Password visibility, Unknown sources and etc.

Accounts

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

Language & input

Language- Choose your preferable language.
Keyboard & input method Change keyboard & keyboard settings.
Speech Manage settings for Voice input, Text-tospeech output, Voice control.

Date & time

Set date & time and format

About tablet

See status, legal information, ETC

5. How to connect/disconnect the device with/from the computer

Connect the device with PC.
Connected as a media device or Connected as a USB storage show up as below.

6. How to install Applications(.apk file) into the device

Method 1.

1. Connect the device with internet. See above [Wi-Fi] in order to connect internet. Connect the device with PC

2. and search the applications you want to install.

3. Follow the instruction on the screen for installation.

Method 2.

1. With your computer, search application le(.apk) that you want to install into the device.

2. Download the le(.apk) into your computer.

3. Connect the device with your computer.
   See above [How to connect/disconnect the device with/from the computer.]

4. Copy and paste .apk file into the device and disconnect it from your computer.

5. find .apk file that was copied into the device.

6. Press the file to install and follow the instruction on the screen.

Note

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications.
If you do not meet these requirements, then you do not have permission to download adult applications.
In case of any problems including legal issues from the breach by end-
manufacturer shall not be responsible.

7. How to change wallpaper and widgets

On Desktop screen, touch and hold somewhere in the screen.
Select WALLPAPERS or WIDGETS

WALLPAPERS
Select one of categories of wallpaper.
Select one you desire and press Set wallpaper.

WIDGETS
Touch and hold your desired wiget icon for 1 second.
And drag it to desktop screen.

8. How to make desktop icons

1. Touch the Apps icon ns

Specification

OS		Android 5.1
CPU		Quad core cortex RK3126 processor
SDRAM		DDR3 512MB (3D accelerator possible for 4D games)
Display		10.1" TN 1024 x 600 Capacitive touch panel
Multi touch screen		Yes : 5 point
Built-in flash memory		8GB / 16GB
IO ports	Audio port	3.5ø earphones
	USB port	1 x 5pin micro USB (2.0 high speed)
	Charging port	5V 2A
	HDMI port	N/A
	Micro SD	Micro SD card
	OTG port	Same as USB port
	Button	Power,VOL-, VOL+, Reset
Speaker		Frequency response : 20Hz 20k Hz, N/S : >90%
G-Sensor		Yes
Camera		0.3MP (front), 0.3MP (rear)
Wi-Fi		802.11b/g/n
Power		Adaptor 5V -2A
Battery		3.7V Li-Polymer
Dimension		260.1 x 149.5 x 9.5 mm
Charging time (By charger)		5~6 hours

For more information please check our website

www.mpmaneurope.com